

BOLT Spare Tire Lock Instructions



1) Remove lug nut from wheel/threaded rod



2) Place BOLT Lock Pin piece over threaded rod



3) Reattach lug nut onto threaded rod, securing BOLT Lock pin.



4) Place Cover (square hole) over BOLT Lock Pin and cover nut



5) Attach BOLT Head to pin and press until locked.