

# BOLT®

BREAKTHROUGH ONE-KEY LOCK TECHNOLOGY

## JL HOOD LOCK KIT

FOR SPANISH AND FRENCH TRANSLATIONS GO TO:

[HTTP://WWW.BOLTLOCK.COM/ABOUT-STRATTEC/BOLT-LITERATURE](http://www.boltlock.com/about-strattec/bolt-literature)



**JL Hood Lock**

*Code lock cylinder before installing JL Hood Lock in Jeep*




**Phillips Head  
Screwdriver**



**Flathead  
Screwdriver**



**Rivet Gun**

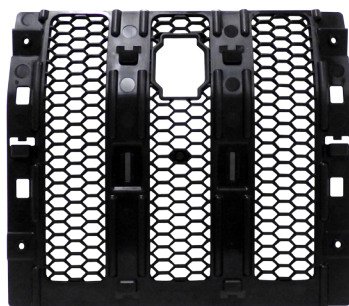

**JL Grille Insert**




**6X  
Plastic  
Push Pins**




**4X  
1/4" Rivets**


### Instructions for coding lock cylinder

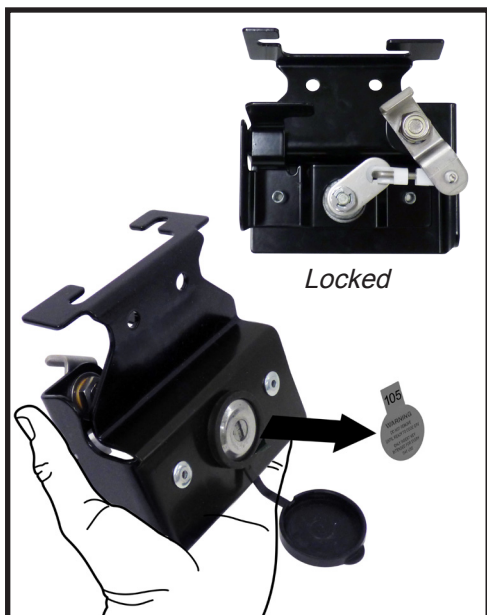

1. Read and remove warning sticker
- Remove key from key chain
  - Keep hand/fingers away from pivoting lever while coding

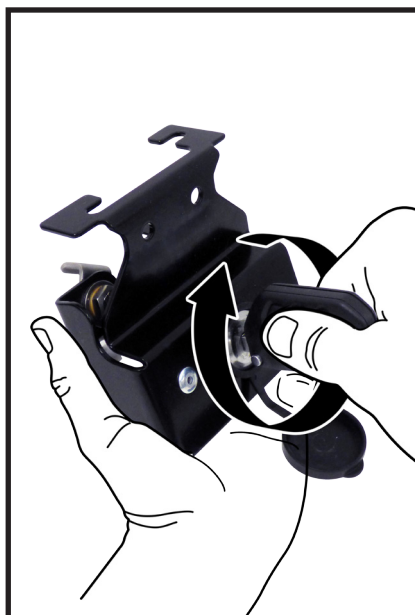


2. *Do not pull up/down on key while coding*
- While maintaining full key insertion, turn the key clockwise until it stops
- the lock is now coded to your key!

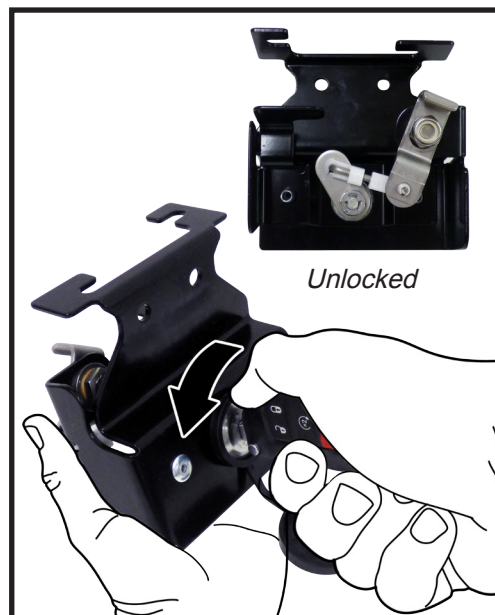


3. Remove key the lock is now in the unlocked position - keep lock in this state during installation.


## Instructions for Installation

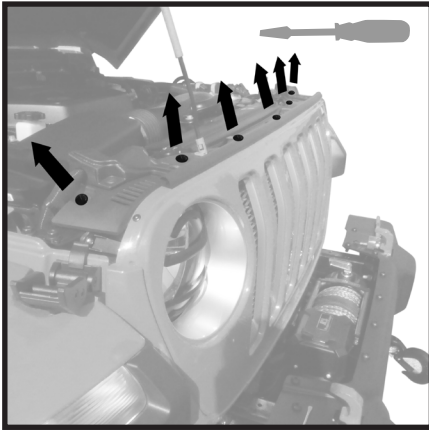


4. Open hood; using a flat head screwdriver, remove the 6 plastic push pins from the top of the grille.

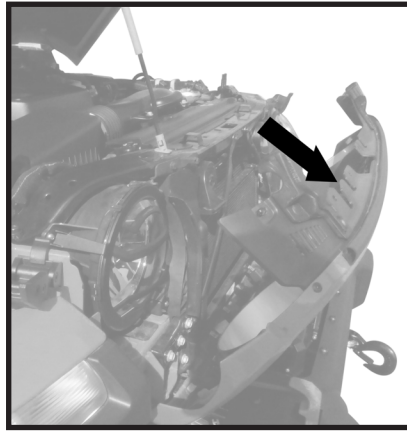


5. Pull grille forward and downward to unhinge the snaps along the bottom.

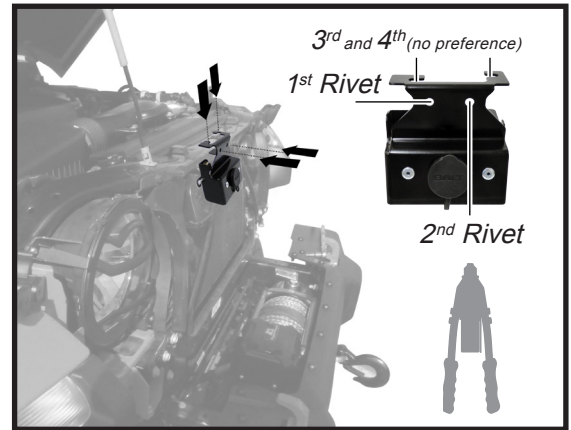


6. Line up the mounting holes in JL hood lock with existing holes on the vehicle frame - Using the rivet gun install the 4 rivets in place - start with the 2 front holes as shown.

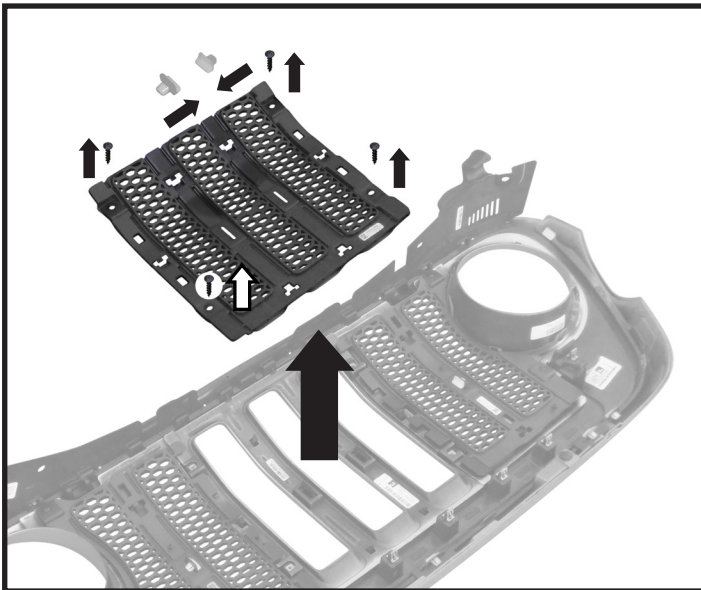

7. Lay the grille down on a protected surface (cardboard) with the interior facing up. Using a phillips screw driver, remove the 4 screws and 2 plastic clips, and remove the middle section of the grille.

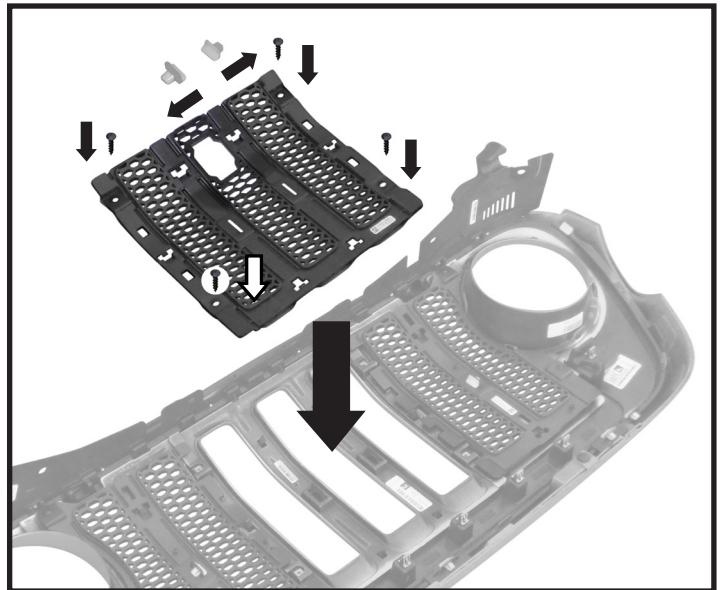

8. Position the new grille insert in place and secure using the same 4 screws and 2 plastic clips.

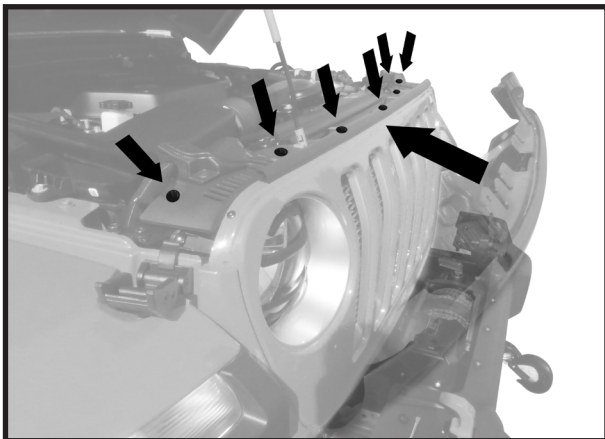

9. Position the grille back into place using 6 new push pins provided.



10. Close and latch hood shut, insert key, turn to the left to lock the hood, and remove your key.