


OFF VEHICLE COUPLER LOCK


FOR SPANISH AND FRENCH TRANSLATIONS GO TO: HTTP://www.boltlock.com/about-strattec/bolt-literature

LOS TRADUCTORES AL ESPAÑOL Y FRANCÉS PUEDEN VISITAR: http://www.boltlock.com/about-strattec/bolt-literature POUR LES TRADUCTIONS EN ESPAGNOL ET EN FRANÇAIS, ALLEZ À : HTTP://WWW.BOLTLOCK.COM/ABOUT-STRATTEC/BOLT-LITERATURE


Items:

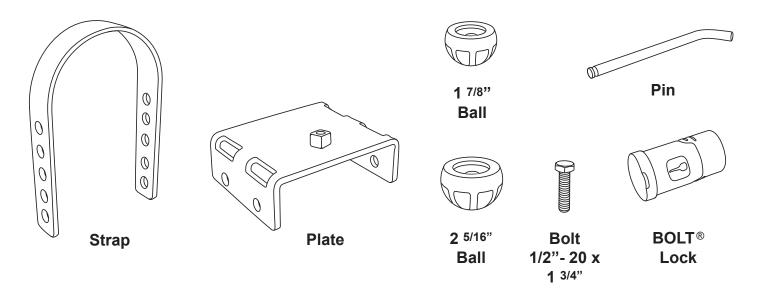

Step 1: Instructions for Coding the BOLT® Lock to your ignition key:

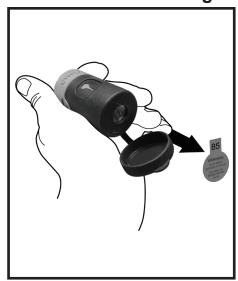

1.1 Read and remove warning sticker - remove key from key chain

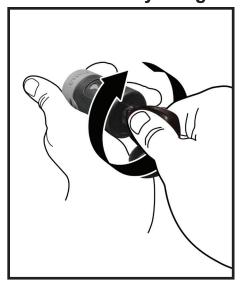


1.2 (Insert key - Do not pull up/ down on key while coding) While maintaining full key insertion, turn the key clockwise until it stops




1.3 The lock is now successfully coded - Cycle Lock 3x to ensure that the lock was properly coded


Step 2: Setting up your Off Vehicle Coupler Lock

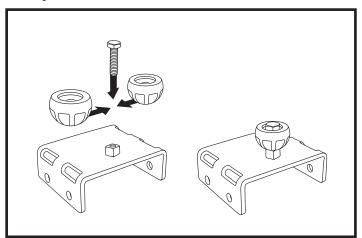


- 2.1 Select the correct ball size for your trailer coupler
- 2.2 Place ball on plate over the nut
- 2.3 Tighten bolt using a 3/4" wrench

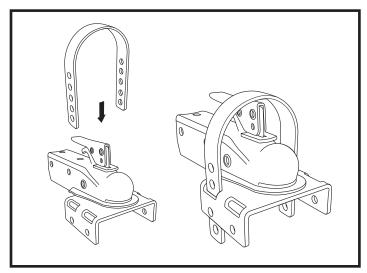


- 3.2 Place strap over coupler and through either the forward or rear slots of the plate (depending on your coupler style)
- 3.3 Adjust strap height until it is snug with the coupler, and a set of holes is in line with the plate

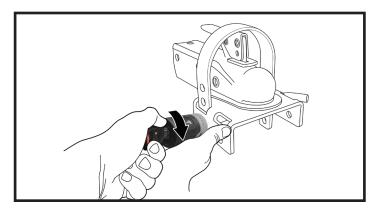

Step 3: Using your Off Vehicle Coupler Lock

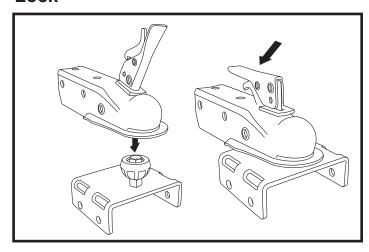

3.1 Place plate with ball attached in your coupler and latch the coupler

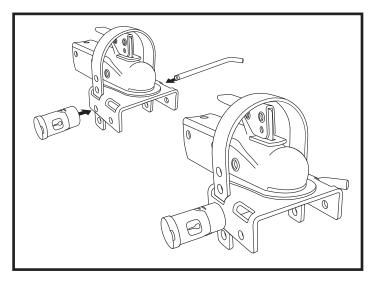

- 3.4 Place pin through the plate and the strap
- 3.5 Secure the pin with the BOLT® Lock
- 3.6 Make sure the BOLT® Lock is fully inserted

4.1 Use your ignition key to unlock when you need it!

For more information go to:

BOLTLock.com